

# Electric Power Transfer Methods

## GOOD

Loop



- Least expensive
- Easy to install
- Insecure

## BETTER

EPT (Electric Power Transfer)




- More expensive than a loop
- Secure when the door is closed.
- More difficult and more expensive to prep in a new installation
- Extremely difficult to prepare in retrofit situations, in particular when working with grouted frames
- Until now the only choice available with 18 AWG wire needed for demanding loads

## BEST

18 AWG

Concealed Electric Hinge

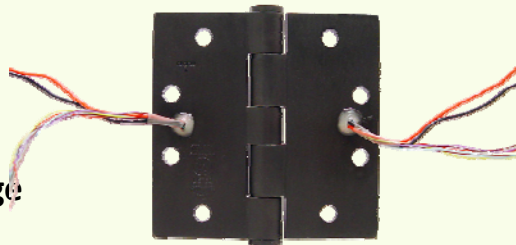

- The most secure
- The electrified function is completely invisible
- Can accommodate demanding loads
- Much easier and less expensive to prep in both new and retrofit applications, making it a practical and cost effective choice